

RMS 5533 Quick Start



- Standard 3 unit rack mount size, 5 inch LCD×3
- 800×3 (RGB) ×480 for each LCD
- 16:9 / 4:3 adjustable
- SDI/HDMI embedded audio output via 3.5mm earphone socket
- Each LCD optional TALLY module
- Max input resolution 2048×1152 or 2560×816
- Underscan / Overscan switch
- Customer editable video title
- Viewangle adjustable structure
- Each input with loop through
- Auto-identify input format
- Auto input standard detection

CONTENT

Product Introduction	2
Packing Configuration	3
Hardware Orientation	4
Front Panel	4
Back Panel	5
Menu Operation	6
Content	6
MENU	7
System Submenu	8
Picture Submenu	9
OSD Submenu	10
Display Submenu	11
F Key Submenu	12
VGA Setup Submenu	13
System Operation	14
Content	14
How to Turn On/Off the Monitor	15
How to Monitor the Audio	15
How to Choose the Signal	16
How to Use User Defined Function Key	17
How to Display Aspect Ratio	18
How to Display Current Settings	18
Contact Information	19

Product Introduction

RMS 5533 is a 19" 3RU standard rack mounting LCD monitor, with 3 high resolution 5" LCD panels of independent input controlling, 800×3 (RGB) ×480, and wide viewing angle. Each LCD of RMS 5533 accepts 1 3G/HD/SD-SDI, 1 DVI, 1 composite video, each input with loop through output. Support SDI and HDMI embedded audio output and TALLY light control and display. RMS 5533 has a 2-pin pole 12V DC power connector for all the 3 LCD panels.

The RMS 5533 is ideal for a wide range of applications requiring monitoring of real time display or content with the highest quality. Because monitoring or preview the ready output content is secure and important for rental and staging, and broadcasting control, and with utilizing high definition monitoring in limit rack mount size are favored in this environments which room is very limitation and more info is required as possible.



RMS 5533 Front Panel



RMS 5533 Back Panel

Packing Configuration

Power Cord



USB Disk



Screw Driver



Antistatic Bag



Screen Film



 
Certification



Note: The color of the screw driver is randomly when packing.


Hardware Orientation

Front Panel

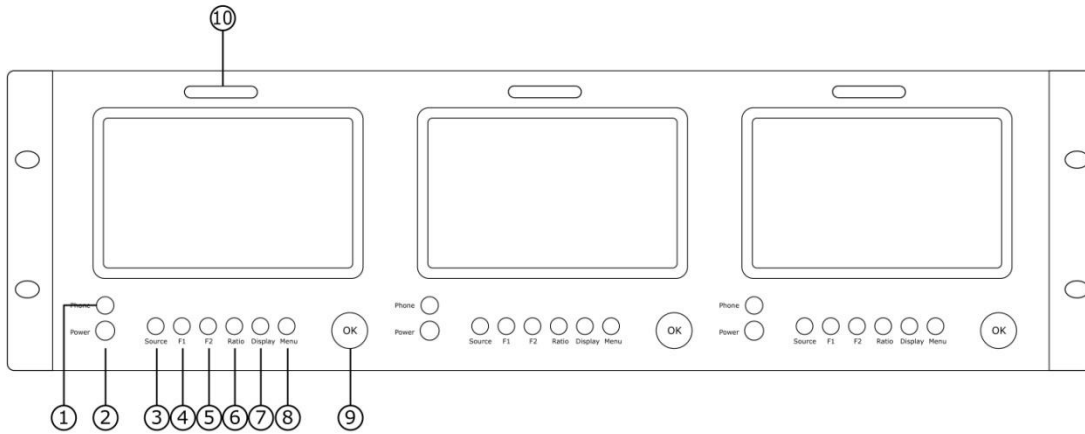

Button Instruction			
1	3.5mm earphone jack	7	Display current settings
2	Power on/off indicator	8	Menu button
3	Input signal button	9	Select and apply button
4. 5	User defined function button	10	Tally light
6	Ratio button		

 Back Panel

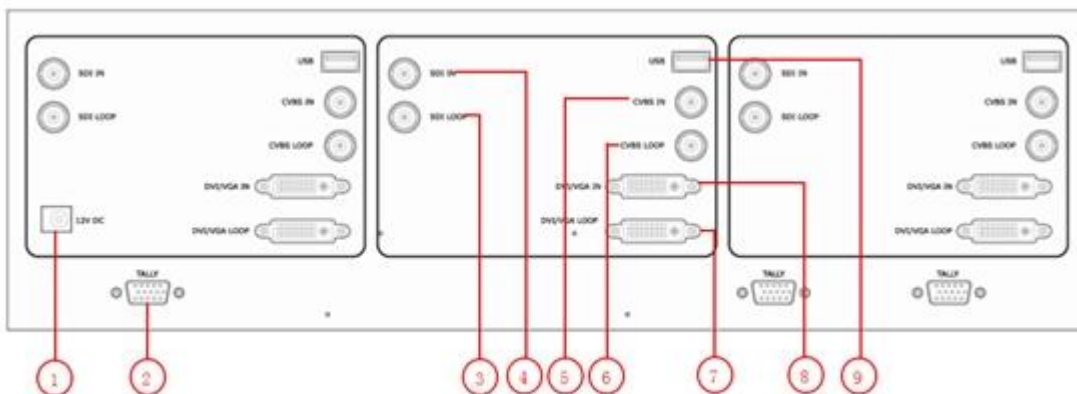

Input Interface	
4	3G-SDI input BNC port
5	CVBS Input BNC port
8	DVI+VGA Input DVI-I port

Loop Out Interface	
3	SDI Loop Out BNC port
6	CVBS Loop Out BNC port
7	DVI+VGA Loop Out DVI-I port

other Interface	
1	Power
2	TALLY Controlling Port
9	USB Interface USB-B

Menu Operation

Content

- MENU
- System Submenu
- Picture Submenu
- OSD Submenu
- Display Submenu
- F Key Submenu
- VGA Setup Submenu

MENU

Language setting

The language in menu is optional, it includes Chinese, English, etc. English is the default language.

Following is the operation for how to change English to Chinese, and the opposite applies as well.

1. Push the “Menu” button to enter to menu system.
2. Rotate the knob to select “OSD” and push the knob to confirm.
3. Enter to “OSD” option to select “LANGUAGE” and push the knob to confirm.
4. Rotate the knob to change “ENGLISH” to “CHINESE”.
5. Push the “MENU” button to return to menu system.

Submenu setting

1. Push the “Menu” button and it will display menu system.
2. Rotate the knob to select an item. The selected item will be highlighted display yellow. Push the knob (select yellow) to enter the selected item, rotate the knob to select the parameter.
3. Under menu system, push the “Menu” button to back to previous menu, then push the “Menu” button to exit.

System Submenu



The System Submenu includes:

1. RATIO: Aspect ratio has two options, 16:9 and 4:3.
2. SCAN: “UnderScan” / “OverScan” selection.
3. ZOOM: “OFF”, “Zoom1” and “Zoom2” selection.
Zoom1: Canon DSLR scale zoom-in.
Zoom2: Pixel to Pixel zoom-in.
4. MARKER: Select and set the safe area scale from 80%, 85%, 90% and 95%.
5. FLIP: Select “ON” and push the knob to flip the picture by 180°.
6. RESET: Select “OK” to recover all to factory setting.
7. TITLE: User defined title.

Yellow is the selected letters, rotate the knob to select the letters, and push the knob to input.

Max 10 letters are supported. After setting, push the knob to confirm, the system will display the user defined title.

Picture Submenu




SYSTEM	PICTURE	OSD	DISPLAY	FKEY	VGA Setup
	CONTRAST		50		
	BRIGHTNESS		50		
	SATURATION		50		
	SHARPNESS		50		
	CLR TEMP		Medium		
	PIC MODE		Standard		
	HUE		50		

Navigation icons: ▲ ▼, ↶ MENU, ○ OK

The Picture Submenu includes:

1. CONTRAST: The adjustment range is 0~100.
2. BRIGHTNESS: The adjustment range is 0~100.
3. SATURATION: The adjustment range is 0~100.
4. SHARPNESS: The adjustment range is 0~100.
5. COLOR TEMP: Color temperature, the selections includes: cool, medium, warm and user.
6. PIC MODE: User defined and preset picture modes, including dynamic, standard, mild and user.
7. HUE: The adjustment range is 0~100 (Only available under CVBS NTSC input, other signal display gray and can not be adjusted).

 
OSD Submenu

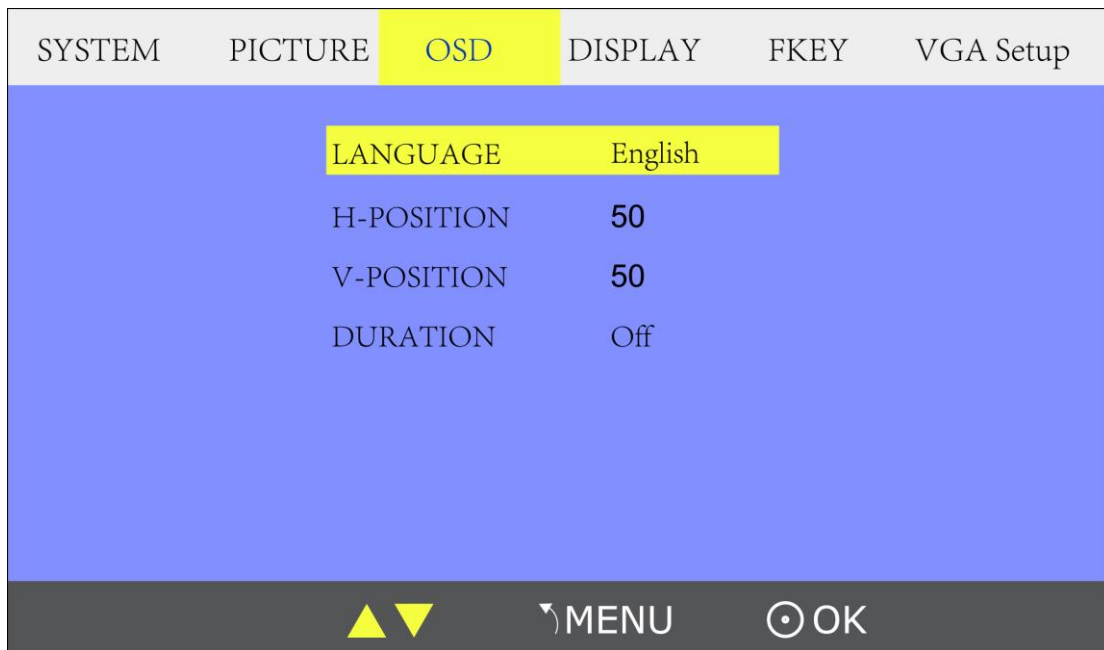

The OSD Submenu includes:

1. LANGUAGE: Can choose Chinese, English, etc.
2. H-POSITION: Adjust the horizontal position of the menu window, the adjustment range is 0~100.
3. V-POSITION: Adjust the vertical position of the menu window, the adjustment range is 0~100.
4. DURATION: Menu timeout setting, the adjustment range is 5-60s, choose "Off", it will automatically exit if no operation, system default "Off".

 
Display Submenu

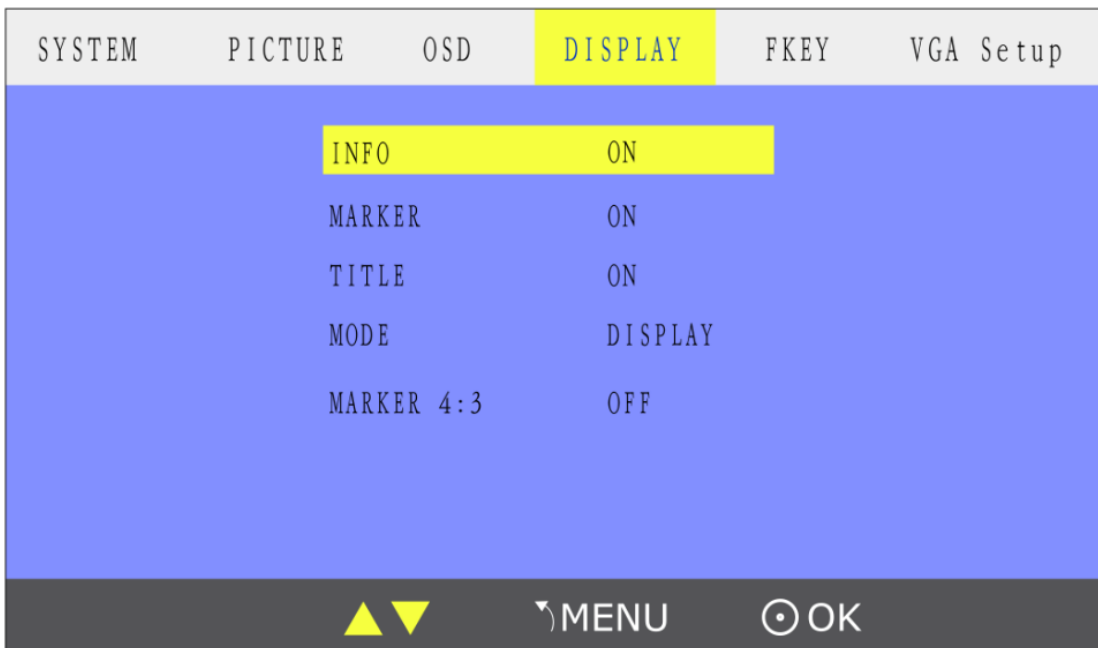

Enter to "Display" submenu, to set the following items:

1. INFO: Select "ON", screen will display "Input Format", "RATIO", "SCAN", "MARKER", "FLIP", "ZOOM" at the up-left.
2. MARKER: Safe area. Select "ON", screen will display the safe area, and select "OFF" to close it.
3. TITLE: User edited title.
4. MODE: "DISPLAY" or "TP". Select and press "DISPLAY", screen will display the image. Select "TP" and press "DISPLAY", screen will display test pattern to check if LCD screen operate normally.
5. MARKER 4:3: Choose "ON", then 4:3 scale mark on image.

 F Key Submenu

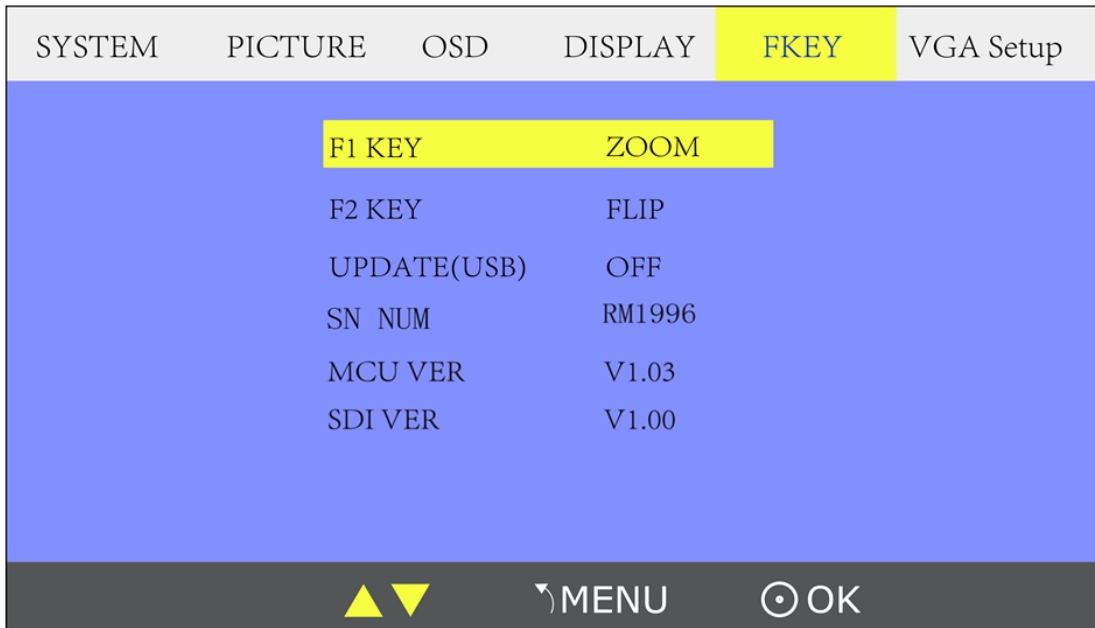

Enter to "FKEY" submenu, user defined F1/F2 functions. The available function items are:

RATIO: Aspect ratio switch.

SCAN: Underscan / Overscan switch.

ZOOM: Picture Zoom-in.

FLIP: Image flip.

PIC MODE: Preset picture mode switch.

CLR TEMP: Color-temperature switch.

BW/COLOR: Color / Black & white switch.

 
UPDATE (USB): Via USB input, enter to "Software Upgrade (USB)", and select "ON" to upgrade the software.

SN NUM: Display the serial number (For read only).

MCU VER: Display the software version information (For read only).

SDI Version: Display the SDI version information (For read only).

VGA Setup Submenu

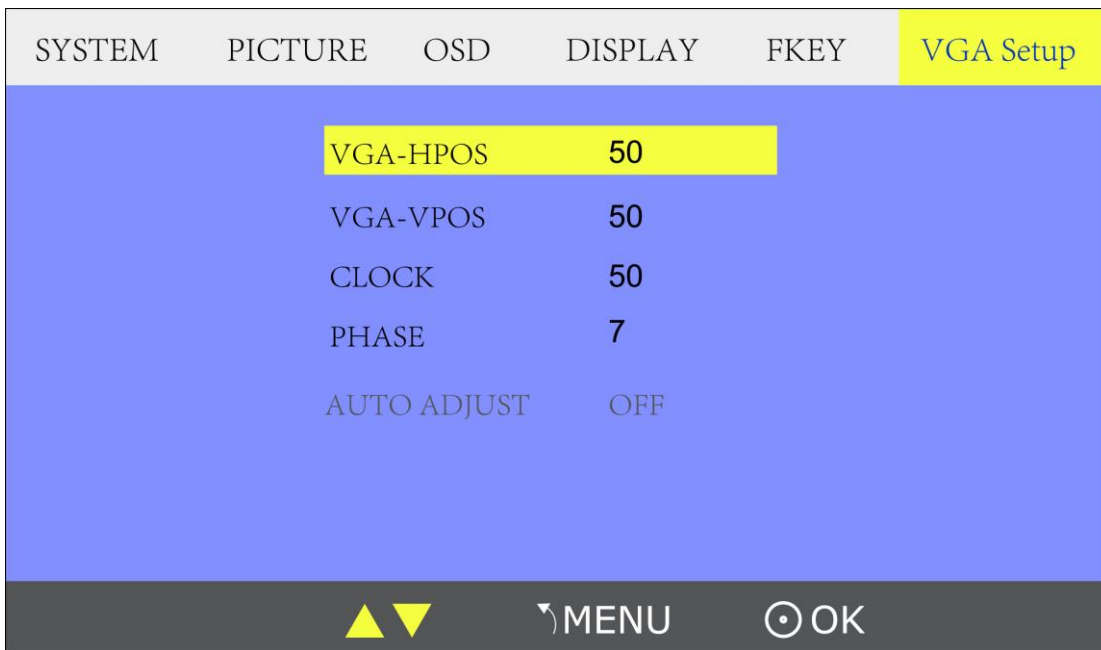

Enter to "VGA Setup" submenu to adjust VGA-HPOS (0~100), VGA-VPOS (0~100), CLOCK (0~100), PHASE (0~100). Also can select "ON" at "AUTO ADJUST" to adjust when input VGA signal.

System Operation

Content

- How to Turn On/Off the Monitor
- How to Monitor the Audio
- How to Choose the Signal
- How to Use User Defined Function Key
- How to Display Aspect Ratio
- How to Display Current Settings

How to Turn On/Off the Monitor

1. Plug in the power cord.
2. Push the “Power” button, key light lights, about 10 seconds later, the monitor begins to work.
3. Push the “Power” button again, key light goes out, the monitor is in standby state.
4. Disconnect the power, the monitor is turned off.

The monitor will memory the state before shutdown, and will keep the state when start the computer next time.

Note

Disconnect with power cable if the monitor will not be used for a period of time.

How to Monitor the Audio

First, ensure the monitor power on and in normal operation.

Specific operations are as follows:

1. Push “SDI” or “DVI” button, user can monitor SDI and HDMI (supported by DVI input) embedded audio.
2. Push the knob, (or wait for about 5 seconds when out of menu system), rotate the knob to choose the desired volume.

 


How to Choose the Signal

First, ensure the monitor power on and in normal operation.

Specific operations as follows:

1. Push the “Source” button, and LCD screen displays as follows:

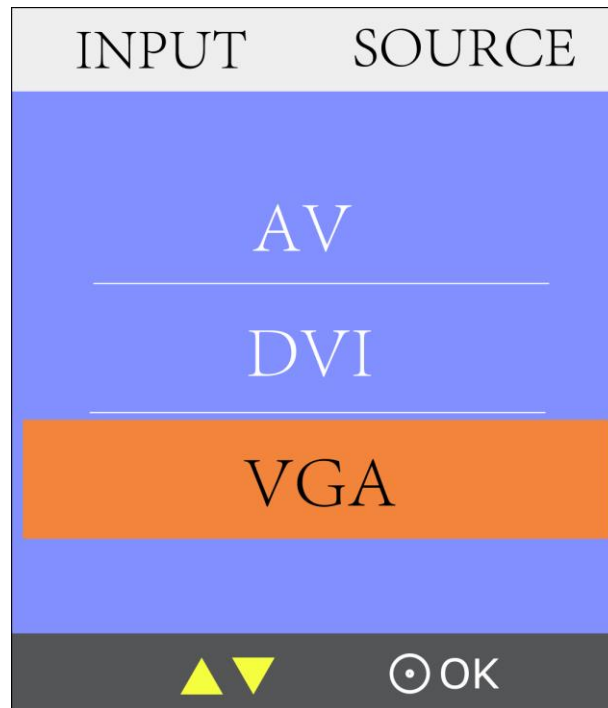

2. Push “OK” rotary to choose signal, AV, DVI, VGA, SDI (SDI is optional module) are available.

 
3. Push the “OK” button to ensure the selected signal

How to Use User Defined Function Key

First, ensure the monitor power on and it is in normal operation.

Specific operations are as follows:

1. Push the “Menu” button, and enter to “Menu” system. Rotate the knob, and choose “FKEY” option, push the knob to confirm.

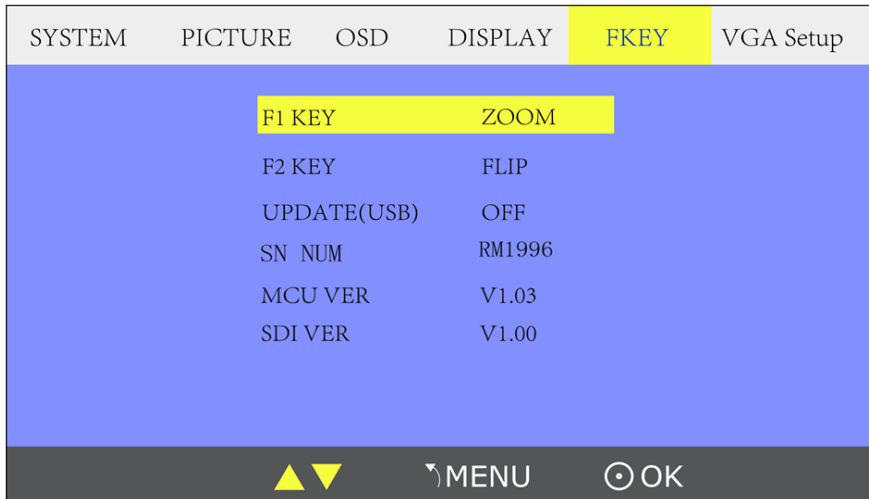

2. Rotate the knob, and choose “F1 KEY” or “F2 KEY”, push the knob to confirm.

3. Rotate the knob to choose items, push the knob to confirm.



How to Display Aspect Ratio

First, ensure the monitor power on and it is in normal operation.

Specific operations are as follows:

 
1. Push the “Ratio” button.
2. Rotate the knob to choose the aspect ratio, aspect ratio has two options, 16:9 and 4:3.



3. Push the knob to confirm.

How to Display Current Settings

1. First, ensure the monitor power on and it is in normal operation.
2. Push the “Display” button, the LCD screen displays the current input signal information, including: VGA, RATIO, SCAN, MARKER, FLIP, and ZOOM. As shown below:

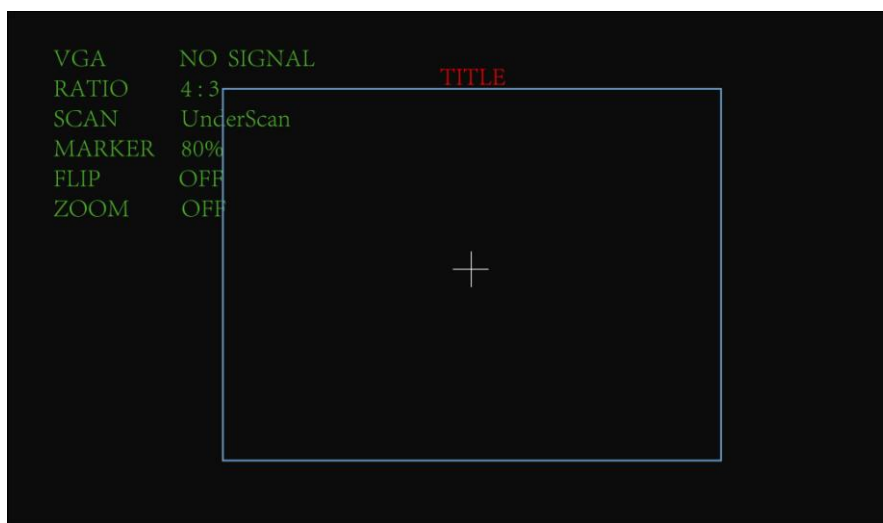

Contact Information

Warranty:

All video products are designed and tested to the highest quality standard and backed by a full 3 years parts and labor warranty. Warranties are effective upon delivery date to customer and are non-transferable. RGBlink warranties are only valid to the original purchase/owner. Warranty related repairs include parts and labor, but do not include faults resulting from user negligence, special modification, lighting strikes, abuse(drop/crush), and/or other unusual damages.

The customer shall pay shipping charges when unit is returned for repair.

Headquarter: S603~604 Weiye Building Torch Hi-Tech Industrial Development Zone
Xiamen, Fujian Province, P.R.C

- **Tel:** +86-592-5771197
- **Fax:** +86-592-5788216
- **Customer Hotline:** 4008-592-315
- **Web:**
 - ~ <http://www.rgblink.com>
 - ~ <http://www.rgblink.cn>
- **E-mail:** support@rgblink.com