

## **MSP 325N**

### UHD 4K HDMI Video Encoder/Decoder



## **Quick Start**

#### Content

Product Overview	3
Key Features	3
In the Box	3
Device Interface	4
Device Indicators	4
Applications	5
Login to the device management page	6
Video input checking Streaming service	6 7
Restore factory settings	8
Note	9

#### **Product Overview**

#### **Key Features**

- Small and compact, easy to carry
- H.265/H.264 high-performance encoding and decoding capability
- Input resolution up to 4K@60Hz
- HTTP/SRT/RTMP/RTSP/NDI protocols supported
- Multi-stream decoding capability
- Feature with one USB interface for recording
- PoE & DC 12V power supply
- TAO Cloud integrated control
- Low latency transmission

#### In the Box





## **Device Interface**





1	Power Switch	When powered on, push left to turn OFF, push right to turn ON
2	Power Port	Connect DC power plug (12V/2A or above)
3	Line In	3.5mm analog audio signal input port for connecting powered microphones
4	HDMI Loop Out	Loops out the connected HDMI IN signal
5	HDMI Input	Connect HD cameras, computers, etc.
6	USB Port	Connect USB drives, external HDDs, or hubs for data storage/transfer
7	1000M Ethernet Port	For network live streaming, supports PoE power supply
8	HDMI Output	Connect monitors to view main picture switching
9	USB-C	Connect external UVC cameras

### **Device Indicators**



Indicators	Name	Color	Status Description	
•	Power	White	Always on	Power connected
			Off	Power off or failure
•	LINK	White	Flashing	Network connected
			Off	Network disconnected/abnormal
€ \$J	Run	White	Flashing	Working normally
			Always on	Starting to work
			Off	Working abnormal/not start

## **Applications**



Notes:					
•	Please use the standard power adapter equipped in the package. Likewise, other				
	unqualified power adaptor may damage the device.				
•	Please make sure the camera is connected to the HDMI IN connector.				
•	If you wish, you can connect MSP 325N to your monitor for real time preview by HDMI				
	OUT.				

#### Login to the device management page

The MSP 325N's management page is accessed via its IP address. Setup steps:

1. Power on the MSP 325N and connect it to the router via Ethernet.



2. Connect the device's HDMI OUT port to a display using an HDMI cable. The IP assigned by the router will appear on-screen (Example IP shown in the figure below. Use the actual router-assigned IP.).



3. Open a browser and enter the IP address to access the web management page. The default username and password are:

Username: admin

Password: admin



#### Note:

To ensure your information security, it is recommended to revise your password after you log into for the first time.

#### Video input checking

After video source connected, you will be allowed to preview video in real time through web browser. Kindly note the video preview window is under "image" mode by default, and it is refreshed every 3 seconds. If your computer's CPU performance is good, you can click the mouse to switch to the "video" mode, and the smoothness of the preview will be improved.

#### www.rgblink.com



#### Streaming service

Click"+"on the right side of the stream service at the bottom of MSP 325N Web UI. Add a stream service, take RTSP protocol as an example.



Select RTSP, fill in the name, service port and session ID, the other setting parameters can remain default configuration, click "OK".

Add streaming service							
Туре	RTSP			Name			
Service port		554		Tunnel Port		8554	+
Session ID	ch01						
-							
Multicast	OFF		N	/lulticast Address			
TTL				video port			+
Audio Port							
	Ca	ancel			c	ж	

**]**<sub>7</sub>



Notes:

The default RTSP port is 554, when add multiple RTSP service, different port number should be used.

Session ID can be any combination of numbers, letters and symbol.

After saving configurations, it will be displayed under the stream service, which is closed by default. Click switch to start the stream service, it will come up a RTSP stream address in the corresponding address.



Click icon 🕀 at the back of stream address, copy it and then check the encoded video stream by VLC.



#### **Download VLC tool**

Download and install VCL tool through official website https://www.videolan.org/vlc/, please follow the official VCL instructions for download method and installation process.

VLC is a multimedia player and framework with free and open cross platform, which can play most of streaming media protocols.

Click media on the VLC - open network streaming - enter the URL address of RTSP over internet, click play at the lower right corner to start streaming.

Me	dia Playback Audio Video	Subtitle	Tools
Þ	Open File	Ctrl+C	>
Þ	Open Multiple Files	Ctrl+S	hift+O
	Open Folder	Ctrl+F	
<b>⊙</b>	Open Disc	Ctrl+D	)
÷	Open Network Stream	Ctrl+N	4
<b>i</b>	Open Capture Device	Ctrl+C	
	Open Location from clipboard	Ctrl+V	1
	Open Recent Media		
	Save Playlist to File	Ctrl+Y	
	Convert / Save	Ctrl+R	1
((-))	Stream	Ctrl+S	
	Ouit at the end of playlist		

请输入网络 URL	
mari//mariaeaaliae.com/stranes.am rtsp://serve.rom/server.sep/server.rom http://www.rom/rube.com/watch?vegg64s	

#### **Restore factory settings**

If the device cannot work normally after modifies the parameters or forgot internet IP configuration and couldn't search and find the device, please restore factory settings.

Two methods for restoring factory settings:

1) If you can login to web page, then via the WEB page, click "Settings–System settings--Restore factory settings".

2) If you can't login to web page, press the RESET button for 5 seconds in the bottom of device.

Note:
After restoring factory setting, below parameters will be turned to default value:
<ul> <li>Login username and password will be "admin";</li> </ul>
• IP address will be restored as 192.168.5.100, subnet mask will be 255.255.255.0;
• All encoding parameters of video and audio will be restored to default value.

#### Note

To prolong the device life, please unplug the power and keep it properly if you do not use it for a long time.

# MSP 325N



Xiamen RGBlink Science & Technology Co Ltd.

- Tel: +86-592-5771197
- **Fax:** +86-592-5788216
- Customer Hotline: 4008-592-315
- Web: http://www.rgblink.com
- E-mail: support@rgblink.com
- Headquarter: The 6<sup>th</sup> floor, No. 37-3 Banshang Community, Building 3, Xinke Plaza, Torch Hi-Tech Industrial Development Zone, Xiamen, China

©2025 RGBlink All rights reserved.