

GX4 Quick Start



- Dedicated RGBlink Subito™ Quatro Sender
- Support for up to 2.6 mega pixels
- Seamless witching between any input
- Picture-in-Picture (PIP)
- Transition effects
- RGBlink instant TAKE with pre-Sync
- Audio controls
- Support for additional input options
- EDID management on board
- On board test patterns
- Support for multi-device cascade
- Compact 1U footprint

Content

Overview	2
Packing Configuration	3
Hardware Orientation	4
Front Panel.....	4
Rear Panel.....	5
Menu Tree.....	6
USE YOUR PRODUCT	7
LED Configuration.....	7
Output.....	10
Input.....	15
Transition.....	17
Audio.....	17
Split.....	18
System.....	19
Language.....	20
Factory Reset.....	20
【TAKE】 Button.....	21
【PIP】 Button.....	23
【SCALE】 Button.....	24
【FREEZE】 Button.....	25
【BRI】 Button.....	25
【SAVE】 Button.....	26
【LOAD】 Button.....	27
Load LED Configuration File.....	28
CONTACT INFORMATION	31




Overview

GX4 is a video processor integrated with RGBLink LED control system-Subito. Subito provides 2.3 mega pixels display up to horizontal 3840 pixels or vertical 2048 pixels, through 4 RJ45 ports.

GX4 supports DVI output resolution at 2048x1152@60 and offers multiple test pattern output resolution options. Beside standard with a 1 HDMI (with loop), 1 CVBS, 1 VGA, 1 DVI and 1 pair of Audio analog connectors, it also comes with two empty module slots for any single input modules selecting from HDMI,DP,DVI,SDI,VGA,CVBS and USB modules. Capability of support any input makes GX4 have features of PIP (dual pictures) , synchronized video with audio control and seamless switching between different inputs. Moreover Extended Display Identification Data(EDID management) make sure display perfectly spot to spot.

System Connection

RGBlink offers solutions to demanding technical problems. Any application questions, or required further information, please contact with our customer Support Engineers.

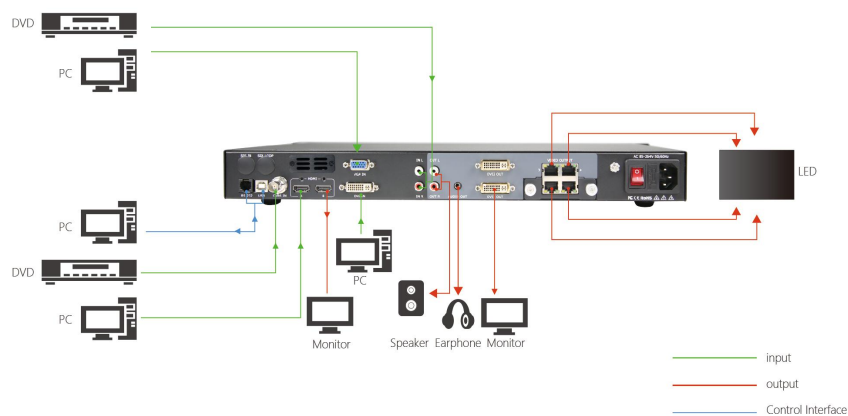

GX4 SYSTEM CONNECTION DIAGRAM



Packing Configuration

AC Power Cord



USB Cable



HDMI to DVI
Cable



Anti-Static Bag









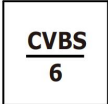

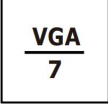
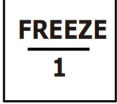
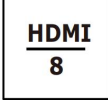
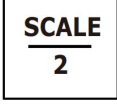
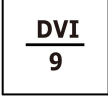
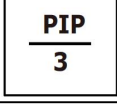
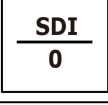
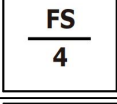

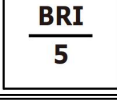

Note:

AC Power Cable supplied as standard according to destination market.

Hardware Orientation

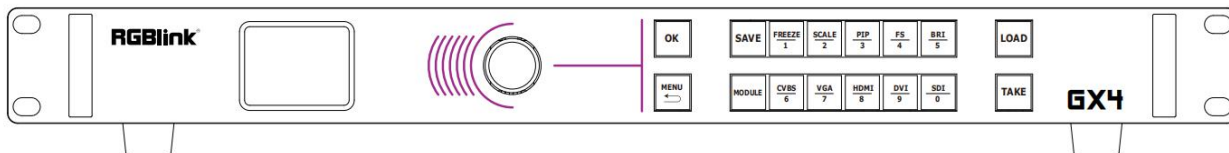
Front Panel

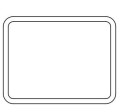

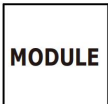Front panel			
	Show operation and menu items		Menu and back button
	Confirm ,Select button and volume adjust ,functioned by pushing and spinning,		Optional Input module selection area
	OK button		Select CVBS input signal, digit 6
	Save current settings as preset		Select VGA and YPbPr input signal, digit 7
	Freeze current screen, digit 1		Select HDMI input signal, digit 8
	Scale button, digit 2		Select DVI input signal, digit 9
	Picture in picture, digit 3		Select SDI input signal, digit 0
	Full screen, digit 4		Switch mode
	Image adjustment, digit 5		Load the saved setting



Rear Panel

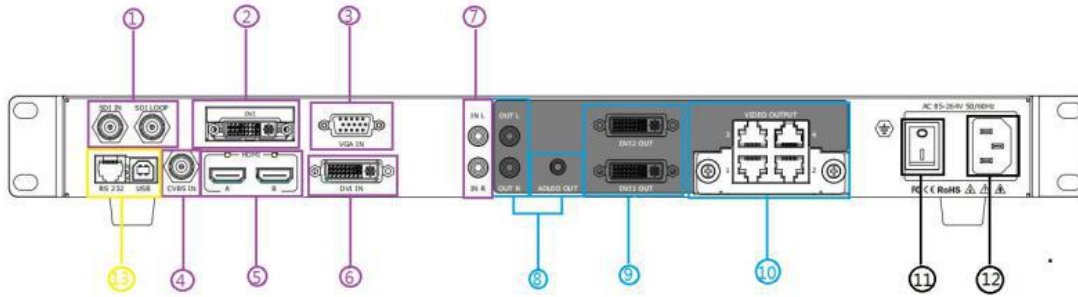

INPUT CONNECTORS		OUTPUT CONNECTORS	
1	Optional SDI in and SDI loop	8	Audio Output
2	1 slot for optional single input	9	DVI Output
3	VGA input	10	Subito Sender
4	CVBS Input	CONTROL PORT	
5	HDMI In/Loop		
6	DVI input	13	USB-A
7	Audio input		RS232
POWER			
11	Power switch		
12	Power IEC-3		

Menu Tree

LED CONFIG	OUT BRIGHT	INPUT	OUTPUT	TRANSITION
QUICK CONNECT		INPUT INFO	OUTPUT INFO	MODE
ADVANCED		SIZING ADJUST	OUTPUT FORMAT	DURATION
CONFIG FILE		USB CONTROL	OUTPUT ADJUST	ALPHA
		VGA ADJUST	SCREEN	DEINTERLACE
		ADC ADJUST	RATIO	IMAGE ENHANCE
		SDI ADJUST	TEXT OVERLAY	TAKE
		EDID MANAGE	DISPLAY MODE	
		VGA TYPE	GAMMA	

AUDIO	SPLIT	SYSTEM	LANGUAGE 语言	FACTORY RESET
MUTE	SPLIT ON/OFF	SYSTEM INFO		FACTORY RESET
VOLUME	H TOTAL	TECH SUPPORT		
AUDIO IN	V TOTAL	WORK TIME		
HDMI INTERNAL/EXTERNAL	H POS	LOCK FRONT PANEL		
	V POS	LICENSE SETUP		
	H SIZE	HOT BACKUP		
	V SIZE	DELAY RECALL		
	RESET			



USE YOUR PRODUCT

LED Configuration

GX4 is built in Subito Sender which can control LED screen with RBGLink receivers.
Here is the led configuration sub-menu.

```
>QUICK CONNECT  >>
ADVANCED        >>
```

1. QUICK CONNECT

```
>SEND CARD SET  >>
RECEIVE CARD SET >>
RESET ALL CARD
```

1.1 SEND CARD SET

X,Y : the horizontal and vertical position of the display that the Sender card control the on LED scressn

One port of Subito Sender can control 650K pixels. If a LED screen is under 650K pixels X,Y can be 0.

X maximum 1920

Y maximum 1080

SAVE SENDER CARD: save the X,Y setting to sender card.

RESET SEND CARD: reset sender card if parameters set above is not proper.

```
>X
Y
SAVE SENDER CARD
RESET SENDCARD
```

1.2 RECEIVE CARD SET

CHOOSE CABLE:choose the output LAN port on the Sender. There are 4 ports available.

HORIZONTAL CARD: how many receive cards needed to receive the data that the chosen sender port offer

WIDTH: width of each led cabinet

```
>CHOOSE CABLE  4
HORIZONTAL CARD 0
VERTICAL CARD  0
WIDTH           64
HEIGHT          64
```



HEIGHT:height of each led cabinet

HOR OFFSET: horizontal offset, -1-4095

VER OFFSET: vertical offset,-1-4095

```

>HOR OFFSET      0
VER OFFSET       0
CONNECT TYPE     >>
SAVE RECEIVER CARD

```

CONNECT TYPE: the connection type of led cabinet. There are 8 types available .

```

>CONNECT MODE  ⇄
SAVE RECEIVER CARD
⇄ ⇄ ⇄ ⇄
⇄ ⇄ ⇄ ⇄

```

SAVE RECEIVER CARD: save setting above to receiver card.

1.3 RESET ALL CARD: reset all sender card and receiver card.

2. ADVANCED

```

>COLOR TEMP     >>
SYSTEM INFO     >>
OSD CONTROL     >>
TEST MODE       >>
CLS SWITCH      >>

```

```

>LOCK SWITCH    OFF

```

2.1 COLOR TEMP: color temperature adjustment for led screen

RED, GREEN, BLUE: value range from 0 to 255

SENDER CARD GAMMA: value from range from 0.0 to 9.9

SAVE TO SENDER CARD: save above setting to sender card

```

>RED             255
GREEN            255
BLUE             255
SENDCARD GAMMA  2.8
SAVE TO SENDER CARD

```

2.2 SYSTEM INFO: system of sender version

2.3 OSD CONTROL

OSD ENABLE: ON or OFF

CONTENT: POSITION or STATE

TEMP MODE: Fahrenheit or Celsius

```

>OSD ENABLE     ON
CONTENT         POSITION
TEMP MODE       F


```

2.4 CLS SWITCH: Clean LED screen Switch when the switch is ON, the LED screen will be black.

2.5 LOCK SWITCH: lock the Led screen, when the it is ON, the led screen will be frozen.



3. CONFIG FILE

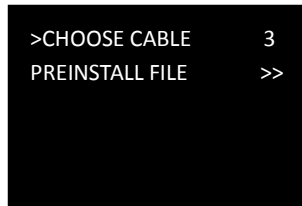


Users can load LED configuration files from LED manufacturers to the GX4 devices by XTOOL. There are 15 manufacturers items in the sub-menu and each manufacture can store 16 files. 270 files in total allow to be loaded.


4. OUT BRIGHT

Output brightness to adjust the brightness of LED screen, value ranging from 0-255

Output

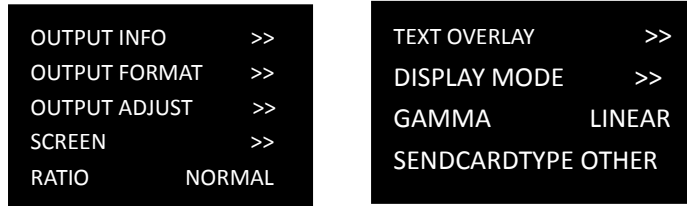


1. OUTPUT INFO: show current input information

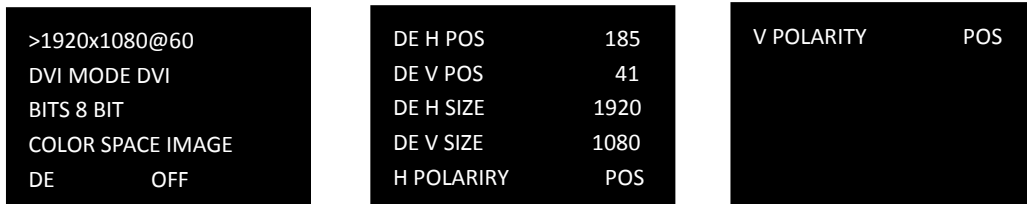


2. OUTPUT FORMAT

2.1 STANDARD: standard output resolution, 26 types available to choose
from 720x480i@60 to 2560x816@60

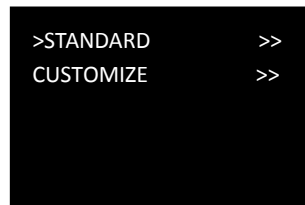



2.2 CUSTOMIZE: custom resolution

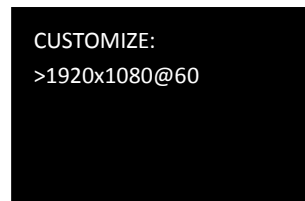

Turn the knob to resolution line and press the knob ">" (arrow) change to "*" (star) put in the numbers for width, then press the knob to confirm the number.

Put in the numbers for height and frame rate in the same way. For example setting resolution 1450x900@60, here are the steps:



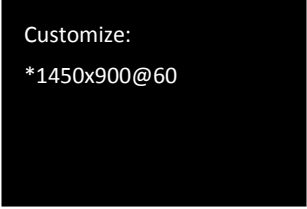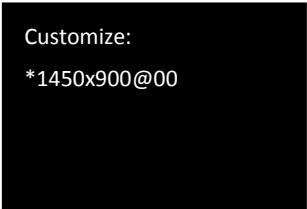

Note: The number buttons lighting up indicate that users can use button to key in numbers.


3. OUTPUT ADJUST

DVI MODE: DIV or HDMI

BITS: DVI 8bit

HDMI 8/10/12 bit

COLOR SPACE: IMAGE or VIDEO

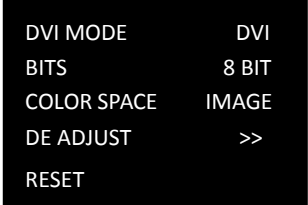

DE ADJUST:

DE: ON or OFF


H POS: horizontal position, value from 0 to 1920

V POS: vertical position, value form 0 to 1080



H POLARITY:horizontal polarity, POS (positive) or NEG (negative)

V POLARITY:vertical polarity, POS (positive) or NEG (negative)

RESET: reset above setting if not proper

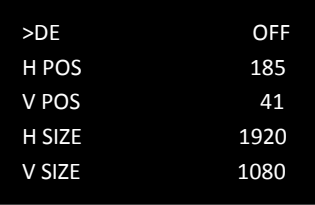

4. SCREEN

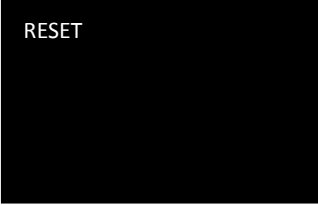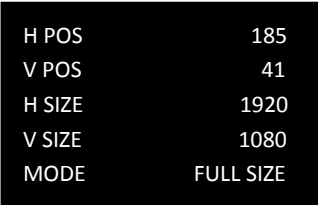

The setting of <SCREEN> is based on the resolution of the LED screen,applicable under single picture mode. For example to display picture on a LED screen with resolution 1408x832, first of all, a resolution close to or bigger than 1408x832 shall be selected. In this case, 1440x900 or resolution above will be proper choice. The closer to the LED screen resolution, the better the display will be.

H SIZE:horizontal pixels, turn the knob or use the digital button to input 1408.

V SIZE:vertical pixels, turn the knob or use the digital button to input 832.


H POS:horizontal position, default 0, set the value as the way of H SIZE and V SIZE.

V POS:vertical position, default 0, set the value as the way of H SIZE and V SIZE.



MODE-- Mode option, select SCREEN SIZE.

RESET:If image quality distorts by improper operation, it can be recover by reset.

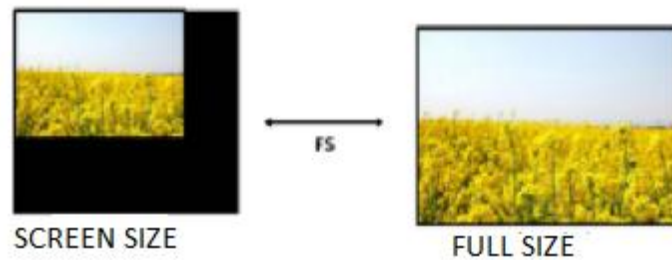

Note: Users can also set <SCREEN> by **【FS】**

$\frac{FS}{4}$

. Push FSbutton light on, Led display image in screen size, Push **【FS】** again, button light off, Led display image in full size.

5. **RATIO**: NORMAL, 16:9, 4:3

6. TEXT OVERLAY

Text overlay function is to add subtitle on output image, more often used on such fields as live broadcasting, live concert, live commentary, and advertisement.

Before text overlay, the subtitle input channel need to be ensured, e.g subtitle input channel VGA

And the overlaid channel need to be decided, e.g overlay text on DVI channel.

Set as follows:

Push **【VGA】** to check VGA input, LCD shows the VGA input.

Push **【DVI】** to check DVI input, LCD shows the DVI input.

Push **【PIP】** , make sure VAG is the small picture and DVI the big picture, if not, turn the <SWAP PICTURE> “ON” in **【PIP】** menu.

PIP	ON
LAYOUT	PIP L+B
>SWAP PICTURE	ON
ALPHA	0
SELECT	IMAGE A

Select <SELECT> in **【PIP】** menu, push **【OK】** turn Knob to select “IMAGE B”, Push <SCALE> to set the size and position of “IMAGE B” which the VGA picture in this case.

PIP	ON
LAYOUT	PIP L+B
SWAP PICTURE	ON
ALPHA	0
>SELECT	IMAGE



If there is black rim on top, bottom, left or right of the VGA picture, use <MASK TOP>,<MASK BOTTOM>,<MASK LEFT><MASK RIGHT> to crop the black rim.

```
>H SIZE      >>
V SIZE      >>
H POS       >>
V POS       >>
RESET
```

Push **【MENU】** ,select<OUTPUT>,push **【OK】** ;

Select <TEXT OVERLAY>, push **【OK】** and enter <TEXT OVERLAY> menu as follows:

```
>TEXT OVERLAY  ON
PRESET      WhOnBk1
BLEND MODE  MODE1
BLEND LEVEL    12
STAND      ABOVE
```

Select <PRESET>Push **【OK】** and turn the knob to “WhOnBk1”or “WhOnBk2” and Push **【OK】** again

Note:TEXT OVERLAY only support monochrome subtitles.

PRESET>User, WhONBk1 (white on black)

WhONBk2 (white on black),BkOnWh1(black on white),BkOnWh2(black on white),

GrnOnBk1 (green on black),GrnOnBk2

(green on black), GrnOnWh1 (green on white)1

GrnOnWh2(green on white),RedOnBk1 (red on black), RedOnBk2 (red on black), RedOnWh1 (red on white),

RedOnWh2(red on white)

```
TEXT OVERLAY  ON
>PRESET      WhOnBk1
BLEND MODE  MODE1
BLEND LEVEL    12
STAND      ABOVE
```

BLEND MODE:MODE 1 or MODE2

BLEND LEVEL:0-15

STAND (standard):BELOW or ABOVE

AND/OR :choose “and” or “or”

RED,GREEN,BLUE:value from 0 to 255

7. DISPLAY MODE

MODE: BLACK OUT, LIVE IMAGE, FREEZE IMAGE,
SOLID COLOR, TEST PATTERN

```
>MODE      LIVE IMAGE
TEST PATTERN  >>
SOLID COLOR   >>
```



TEST PATTERN: Value 0-66
AUTO SWITCH: ON or OFF
HOR STEP: horizontal color graduation value 0-64
VER STEP: vertical color graduation value 0-64
COLOR: WHITE, BLUE, GREEN, RED.

TEST PATTERN	66
AUTO SWITCH	ON
HOR STEP	64
VER STEP	64
COLOR	WHITE

SOLID COLOR
RED, GREEN, BLUE: value 0-255

RED	255
GREEN	255
BLUE	255

8.GAMMA: LINEAR,sRGB, -1.2, 1.2, -1.4, 1.4, -1.6, 1.6



Input



1. INPUT INFO

Show the current input format and resolution


2. SIZE ADJUST

H SIZE:set the horizontal pixels of input image to zoom or scale the input signal

V SIZE:Set the vertical pixels of input image to zoom or scale the input signal

H POS:set the horizontal position of image

V POS:set the horizontal position of image;

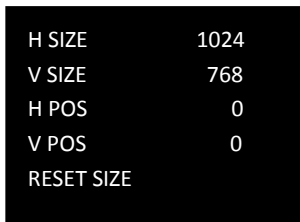


RESET SIZE:if the size is not proper, turn knob to RESET SIZE and press **【OK】**

MASK TOP:crop the top of image

MASK BOTTOM:crop the bottom of image

MASK LEFT:crop the left part of image

MASK RIGHT:crop the right part of image

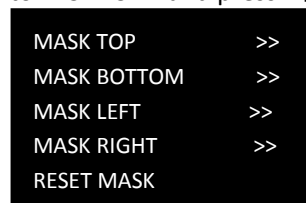

RESET MASK:If the crop not proper, turn knob to RESET MASK and press **【OK】** .

3. VGA ADJUST

Non-standard VGA input signal can cause the input image shifting or not in full screen, therefore, users need to adjust VGA input as follows:

After selecting <AUTO AJUST> the device will automatically adjust the H POS,V POS, CLOCK and PHASE to make input image no shifting and full screen.

Note:If one <AUTO AJUST> cannot meet the needs, users can do <AUTO AJUST> many times. The system can automatically save the ADJUST parameter. Users can also go to <AUTO AJUST> by pressing **【VGA】** button for 10s.



4. ADC ADJUST

AUTO ADJUST

YES <OK>,NO <MENU>


RESET

YES <OK>,NO <MENU>



5. SDI ADJUST

GX4 with SDI optional module come with SDI ADJUST in the menu.

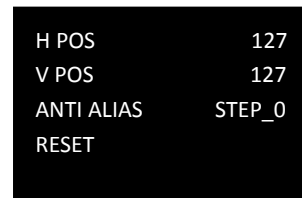



6. EDID MANAGE

DESTINATION: DVI or HDMI

SOURCE: RGB DVI, RGB HDMI, FOLLOW, CUSTOM

CUSTOM EDID

Customize resolution for EDID

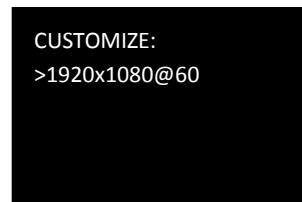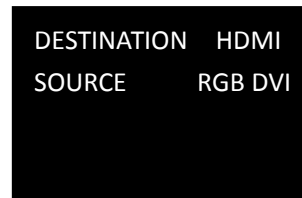

7.VGA TYPE

Choose signal type for VGA button. VGA or YPbPr.

8.DVI4In1 DVI 4 In 1)

GX4 with optional DVI module installed comes with such signal types as VGA, DVI, CVBS, YPbPr. It is offered to users to choose the signal type through the DVI connector which is compatible with VGA, DVI, CVBS, YPbPr via adapter.

Transition

Transition is used to set the switching mode between different input sources.



MODE: Special effects switching modes, including FADE, CUT, WIPE SQUARE IN, WIPE SQUARE OUT, WIPE TOP LIEFT IN, WIPE TOP LIEFT OUT, WIPE TOP RIGHT IN, WIPE TOP RIGHT OUT, WIPE BOTTOM LEFT IN, WIPE BOTTOM LEFT OUT, WIPE BOTTOM RIGHT IN, WIPE BOTTOM LEFT OUT, WIPE LEFT IN, WIPE LEFT OUT, WIPE RIGHT IN, WIPE RIGHT OUT, WIPE TOP IN, WIPE TOP OUT, WIPE BOTTOM IN and WIPE BOTTOM OUT

DURATION: set the transition time ranging from 0.0 to 1.0 S


ALPHA: set the image transparency ranging from 0 to 16

DEINTERLACE: select ON or OFF to enable or shut down the deinterlacing function

IMAGE ENHANCE: image enhancement function, for image edge sharpening, color reduction and image scaling.

TAKE: Select ON or keep pressing 【 TAKE 】 button 3s to enable the function. The selected input signal will be switched to output as the TRANSITION set.


Audio

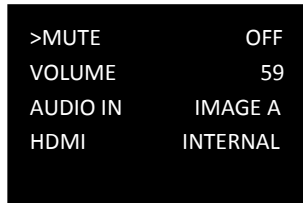

MUTE: select ON or OFF

Volume: adjustment range from 0 to 100

Users can also adjust volume without entering AUDIO menu. Rotate the knob anytime the LCD screen shows the main interface.

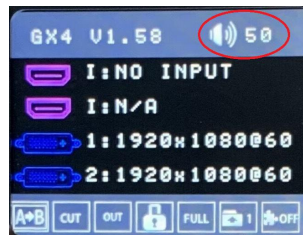

AUDIO IN: select the source of the input audio from IMAGE A or IMAGE B

HDMI: select internal or external audio for HDMI input



Split

GX4 can be used in multiple cascade mode to finish split. When do cascade, connect the signals to the signal distributor first, and then connect from the outputs of the signal distributor to each input of GX4. User can also do cascade via HDMI LOOP port.

```
>SPLIT      ON
H TOTAL     1920
V TOTAL     1080
H POS       0
V POS       0
```

H TOTAL: set the total horizontal pixels of the LED screen

V TOTAL: set the total vertical pixels of the LED screen

H POS: select the total number of horizontal screens

V POS: select the total number of vertical screens

H SIZE: set the horizontal pixels this device will provide.

V SIZE: set the vertical pixels this device will provide.

Reset: If image quality distorts by improper operation, it can be recover by reset.

```
>H SIZE     1920
V SIZE     1080
RESET
```

When doing equal splitting, set H SIZE and V SIZE of each device with same resolution, and then set H POS and V POS of each device correspondingly. When doing unequal splitting, set and save H SIZE and V SIZE of each device according to actual needs.

System

SYSTEM INFO	>>	HOT BACKUP	>>
TECH SUPPORT	>>	DELAY RECALL	252S
WORK TIME	>>		
LOCK FRONAT PANEL	>>		
LICENSE SET UP			

1. SYSTEM INFO

Show flowing information

MCU VERSION, VIDEO VERSION, EXT VERSION,SN

2. TECH SUPPORT

After-Sale Service:
4008-592-315
sales@rgblink.com
www.rgblink.com
TEL +86(592)5771197

3. WORK TIME

WORK TIME: the consistent working time since Latest boot up.

TOTAL TIME: the accumulative working time since the first boot up.

BOOT TIMES: the total boot up times up to now.

WORK TIME	>>
TOTAL TIME	>>
BOOT TIMES	10

4. LOCK FRONT PANEL

YES <OK>, NO <MENU>

After the panel is locked, keep pressing MENU for 3 S to release the panel.

5. LICENSE SET UP

ENETER PASSWORD.

6. HOT BACKUP

HOT BACKUP: ON or OFF

HOT BACKUP_1,2,3,4,5,

Chose Hot Backup On and choose one input source for the each backup. Up to 5 backups can be set

Hot Backup	ON	Backup_5	OFF
Backup_1	VGA		
Backup_2	DVI		
Backup_3	CVBS		
Backup_4	HDMI		



7. DELAY RECALL


Value range from 0 to 255S

Language

To swithc langue here. English or Chinese available.

Or Keep pressing MENU and SCALE button for 3 S to switch language.


Factory Reset

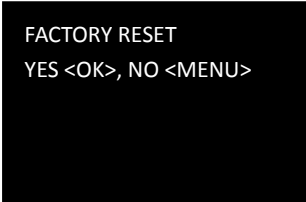
A black rectangular screen with white text. The text reads: "FACTORY RESET" on the first line, and "YES <OK>, NO <MENU>" on the second line.


FACTORY RESET
YES <OK>, NO <MENU>

【TAKE】 Button


When GX4 power on, system default HDMI input signal.

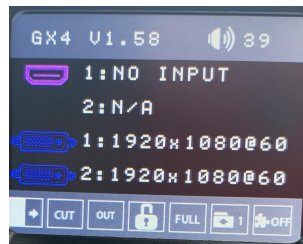


To switch signal, press CVBS,VGA,DVI or SDI. For example, to switch to CVBS, push 【CVBS】  button and the button flashes.

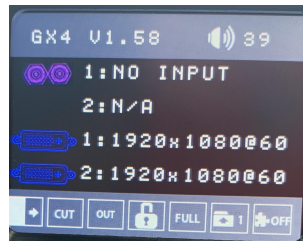


TAKE MODE allow users to switch inputs with transition effect


To Enable TAKE mode , Keep pressing  button for 3s and the TAKE MODE is ON
The LCD screen shows the info below for 2S

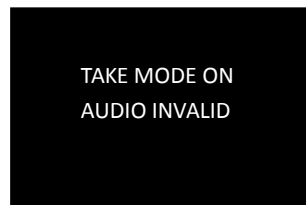


And then go back to the main interface

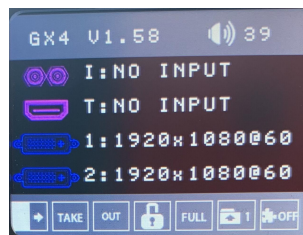

If user want to switch to VGA signal, push VGA  button

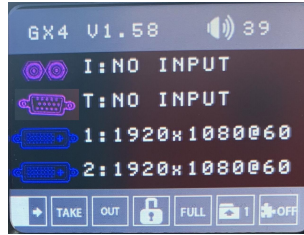


Then push TAKE button again. VGA signal will be switched to LED screen with set transition effect.

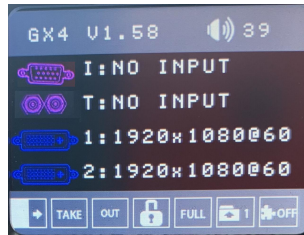

【PIP】 Button

PIP mode can't be enabled unless TAKE MODE is OFF.


Push  button and button light is on. LCD shows the <PIP> menu.

```
PIP                ON
LAYOUT            PIP L+B
SWAP PICTURE      ON
ALPHA             0
>SELECT          IMAGE
```

LAYOUT:

There are 7 layouts available in the menu. PIP L+T, PIP R+T, PIP L+B, PIP R+B, PIP CENTER, PBP L+R and PBP T+B.
Here are 3 examples:


PIP L+T

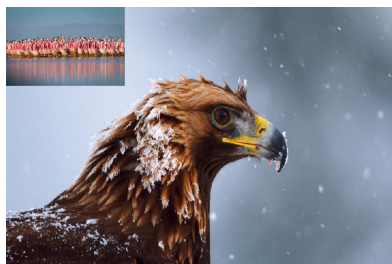

PBP L+R



PBP T+B

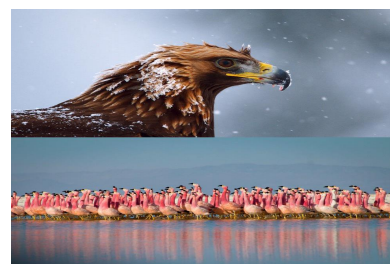

SWAP IMAGE:

Select on or off to switch the main picture and secondary picture (the small one).


ALPHA:

Image transparency setting, the adjustment range is 0 to 16.

SECLECT:

Select IMAGE A or IMAGE B.

【SCALE】 Button

To scale the output image, users can press 【SCALE】  button and set the parameters by turning knob or pressing numeral buttons.

After user press 【SCALE】 , LCD shows the menu items as follows:

H SIZE: set the horizontal pixels of output image

V SIZE: set the vertical pixels of output image

H POS: set the horizontal position of image

V POS: set the horizontal position of image

RESET: If operation is not proper, turn knob to <RESET> and start over.


H SIZE	1920
V SIZE	1080
H POS	0
V POS	0
RESET	

【FREEZE】 Button


To freeze current output image, users can press 【FREEZE】 on the front panel.

LCD shows “FROZEN” in the state bar and the 【FREEZE】 button light is on.

To exit FREEZE mode, press 【FREEZE】 again and the button light goes out.

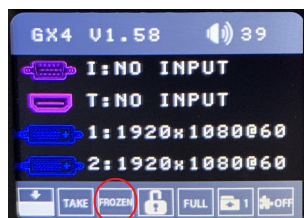

【BRI】 Button

Push 【BRI】 button  and enter the image adjustment menu where users can adjust brightness, contrast, saturation, sharpness, color temperature of red, green and blue.

BRIGHTNESS: range from 0 to 100.

CONTRAST: range from 0 to 100.

SATURATION: range from 0 to 100

SHARPNESS: range from 38 to 62

RED: range from 0 to 100

GREEN: range from 0 to 100

BLUE: range from 0 to 100

RESET: if image quality distorts by improper operation, it can be recovered by reset


*BRIGHTNESS	50
CONTRAST	55
SATURATION	50
SHARPNESS	50
RED	50

GREEN	50
BLUE	50
RESET	

【SAVE】 Button

Push the [SAVE] button, the button light is on, and enable the SAVE function.


LCD shows [SAVE] instruction info to assist users complete operation. Meanwhile, part of numeral buttons 0~9 lights are on and parts flash. Buttons with lights on are empty, flashing buttons are used. LCD shows as below

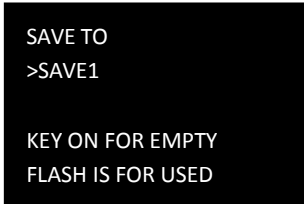

```
SAVE TO  
>SAVE1  
  
KEY ON FOR EMPTY  
FLASH IS FOR USED
```

Saving to flashing positions will overwrite previously saved settings. For example, button 1 is flashing, after pressing button 1, LCD shows

Push 【OK】 to confirm, 【MENU】 to cancel.

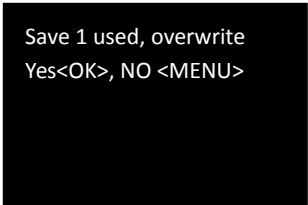

```
Save 1 used, overwrite  
Yes<OK>, NO <MENU>
```

【LOAD】 Button


Push **【LOAD】** LCD shows the instruction information to assist users complete LOAD operation.

Meanwhile, among numeral buttons 0-9, some buttons lights are on, some flash and perhaps some lights go off.

Buttons with light on indicate the <SAVE> ready to load, flash indicate the <SAVE> is currently loaded, light off

indicate no <SAVE> to load. For example button 1 light is on, press button 1 to load <SAVE1>

LCD shows below:

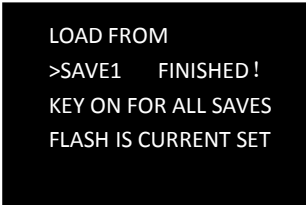


```
LOAD FROM
>SAVE1 FINISHED!
KEY ON FOR ALL SAVES
FLASH IS CURRENT SET
```

Push **【MENU】** to exit LOAD, the button lights go out.

Load LED Configuration File


- 1.Prepare LED configuration file provided by the manufacturer and store it in somewhere easy to find on your computer or USB disk.
- 2.Download and install XTOOL V1.0.1.3. Download XTOOL from RGBlink www.rgblink.com/support#downloads
- 3.Connect GX4 and computer with the USB cable (USB A-B cable) from In The Box.
- 4.Open up XTOOL

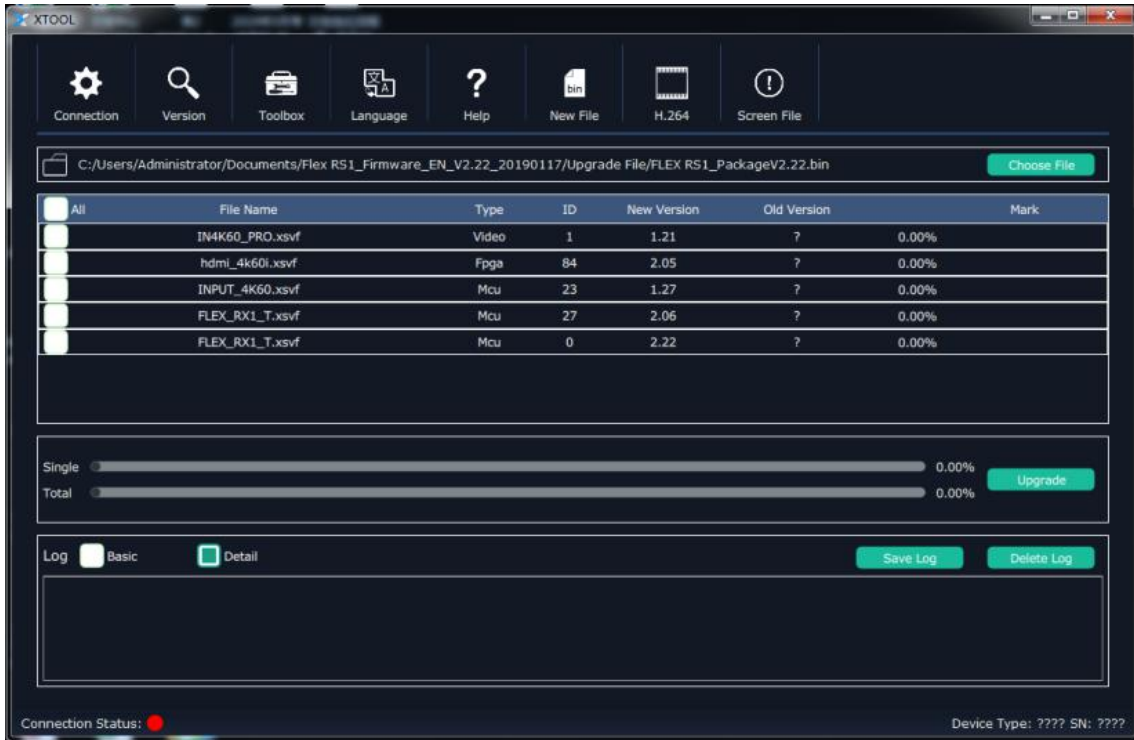

If you find it in Chinese, switch the language by clicking this

5.Set Connection


Click connection icon , select Serial Comm and Confirm.

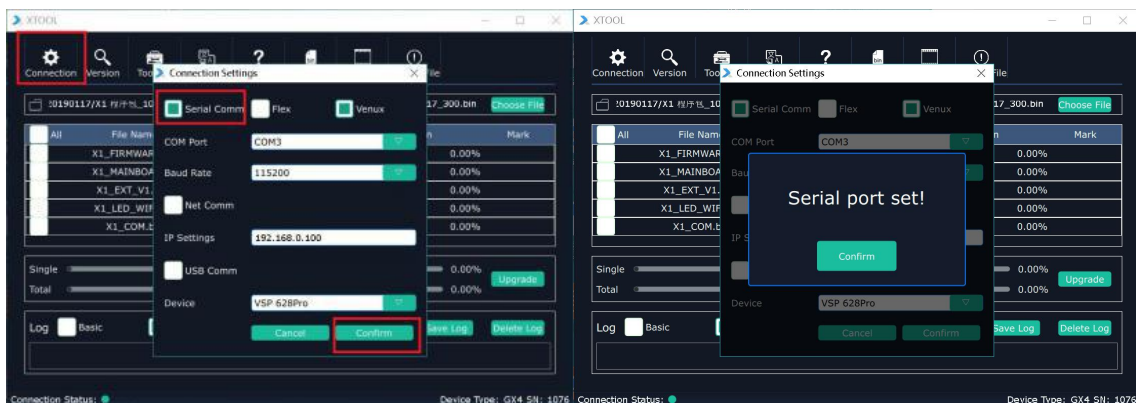

When it is done, a window will pop up showing “Serial port set” and the Device Type and SN (serial number) can be identified.




6. Click Screen File to load the LED configuration file saved previously.

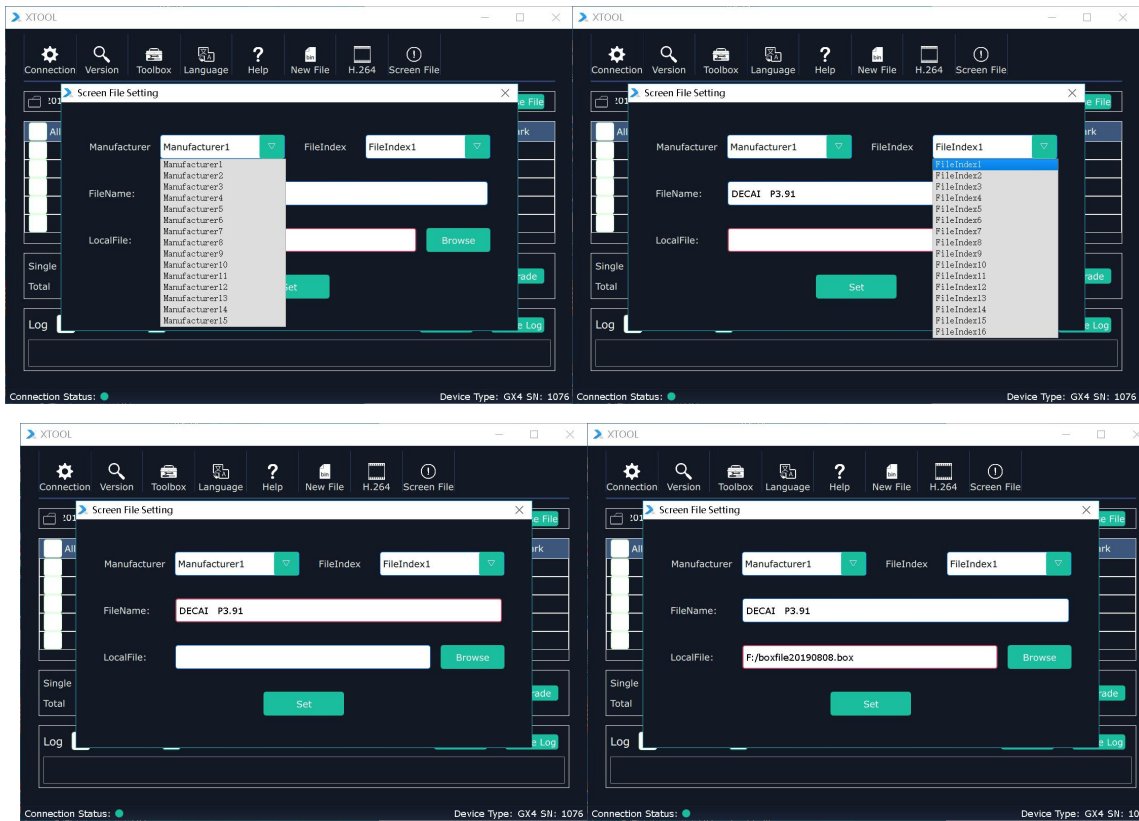

Select Manufacturer from 1 to 15 and File Index from 1 to 16. Type in the File Name according to real manufacturer and the LED screen specification. Click Browse to open up Local file to select the Led configuration file stored before and click Set to confirm.

7. When it is done, a window showing Set Success will pop up.

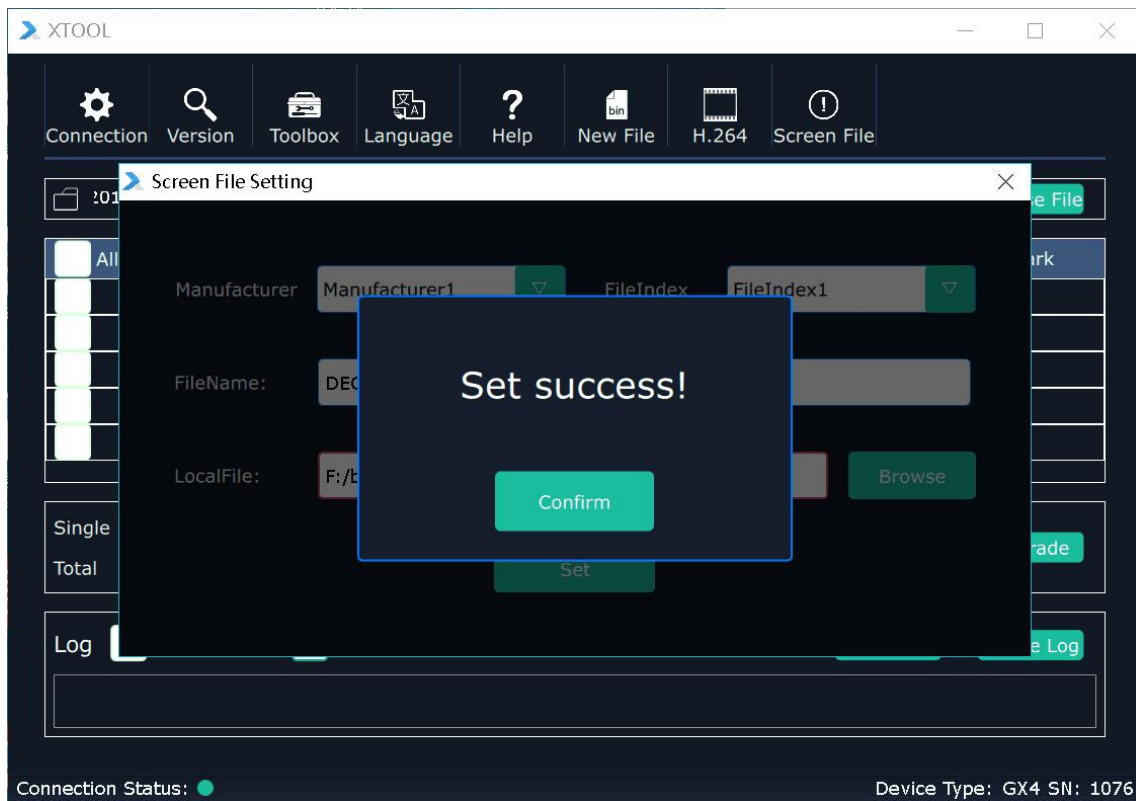

The file has been loaded to the device and users can find and use the file in Menu Configuration - Config File - Preinstall File. Under the Manufacturer index set on XTOOL, there is the file name. Select the file, and press OK, the Led screen will be set as the configuration file.

CONTACT INFORMATION

Warranty:

All video products are designed and tested to the highest quality standard and backed by full 3 years parts and labor warranty. Warranties are effective upon delivery date to customer and are non-transferable. RGBlink warranties are only valid to the original purchase/owner. Warranty related repairs include parts and labor, but do not include faults resulting from user negligence, special modification, lighting strikes, abuse(drop/crush), and/or other unusual damages.

The customer shall pay shipping charges when unit is returned for repair.

Headquarter: S601~609 Weiye Building Torch Hi-Tech Industrial Development Zone Xiamen, Fujian Province, P.R.C

- **Tel:** +86-592-5771197
- **Fax:** +86-592-5788216
- **Customer Hotline:** 4008-592-315
- **Web:**
 - ~ <http://www.rgblink.com>
 - ~ <http://www.rgblink.cn>
- **E-mail:** support@rgblink.com

